



Convert Line Width // #New 26.11.2015

■ **Before** start working with NX10 or Refiling you need to setup your customer default setting regarding converting linewidth of your legacy Data.

Setup definition of your default line width

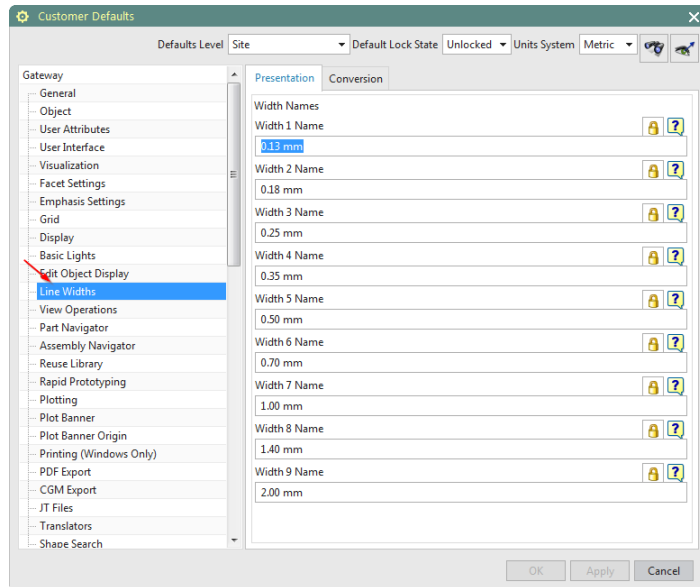

Next picture shows default line width conversion settings

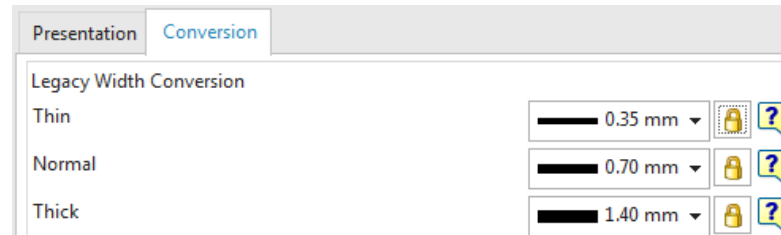

Regarding to most customers it makes sense to use the following settings:



Hint: Setting must be defined in your customer defaults done before usage of NX10 because NX stores Linewidth Conversion rules in the NX Part during **first** opening a Part. When a user changes later the Object Linewidth then user gets the convert setting that was first stored in the NX Part.

If You need to reset the Defaults you can use the following Dialog to reset the default line width conversion setting.

Preferences → Object →

